
Catalogue

Catalogue	1
Use tips	2
2 Power button usage.....	4
3 Touch screen.....	4
4 transfer connection	4
5 TF card Usage	5
6 Start to use	5
Battery management.....	5
Set-up	6
Wi-Fi network setting	6
7 Desktop.....	7
9 Program.....	9
Download	10
10 Menu.....	11
11 Application program.....	12
Install applications:	12
Download applications from Internet:	12
Uninstall application	13
12 Sound Record	13
13 Clock.....	14
Alarm clock	14
14 Download applications and install.....	15
15 Browser	15
16 Calendar.....	16
17 Camera.....	17
Take photos	17
Video Recording	17
18 Calculator	18
19 E-mail	18
20 File Explorer.....	20
You could copy files to File Explorer from external storage device, computer. If you need to copy files to tablet PC, you are required to copy files to SD card and USB storage device in advance.	21
21. Music	21
<i>JPEG、BMP、GIF、PNG</i>	23
24 MAPS	24
When Use this function ,it must be determined computer connection with INTEL network state,	24



After connected network ,please click icon ,can open current position map automatically ; see below picture ,you can find what you want by setting24

25 Local search25

Same similar map functions ,can select to store huge amounts of information25

Appendix. Suggested optional accessories and model.....28

Use tips

 
When using your equipment please obey the following basic security matters need attention in order to reduce fire, electric shock and risk of injury.

- Don't let the product itself get wet in the rain or become damp .
- Please keep device away from direct sunlight and heat objects
- Protect power cable. when connect the power cable, please don't let it be stepped on or above placed items, avoid to be extrusion. Pay special attention to protection of equipment connector.
- Please use the original power adapter for charging, using other charger will cause damage
- Don't dismantle the equipment or repair yourself.

Cleaning equipment

Touch the screen gently. To clean the fingerprint or dust on the screen , it is better to use such as camera use soft cloth but not gauze to clear the dust .

1. Outlook description

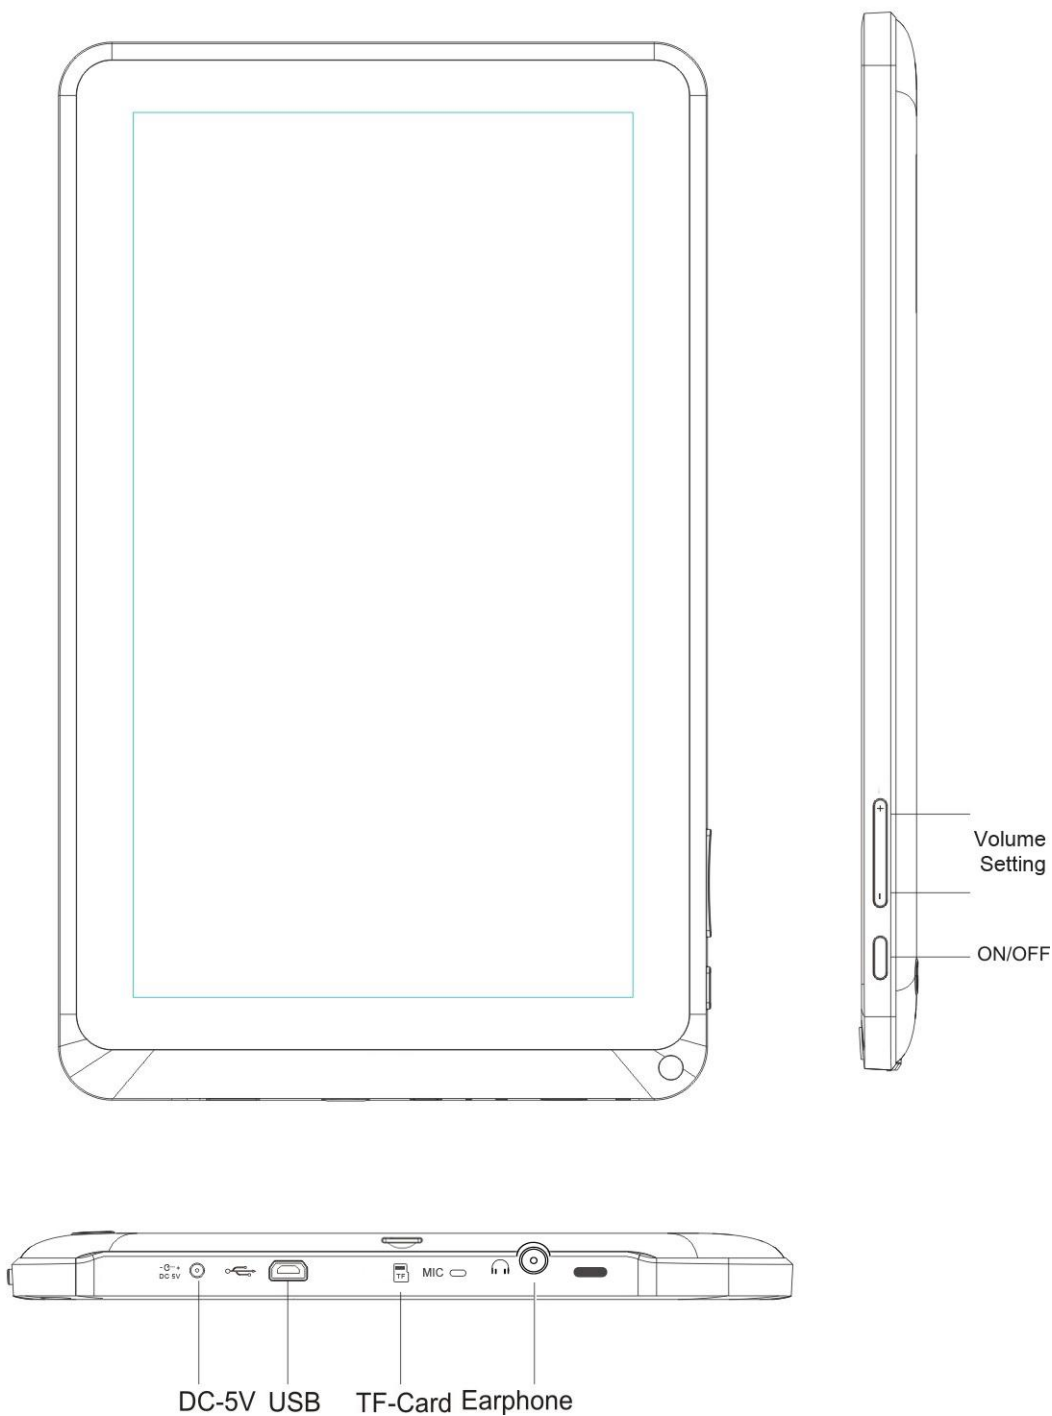

2 Power button usage

Starting up: Long press the power button for 3 seconds.

Power off: Long press the power button for 3 seconds → click power off → click confirm

Screen off and on : Short press power button to turn off or turn on screen
Mandatory shutdown: If the device has no response, long press the power button for 6 seconds to perform mandatory power off

Notice: In case of no necessary conditions, It's better not use mandatory power off . Power off should be performed normally according to the standard steps.
Reset button: Press "reset" button to restart the equipment .

3 Touch screen

According to following user guide, and know how to use touch screen.

Click: Click an optional icon on screen as your choice.

Longer press: chose one icon and press longer, can drag then show the icon on desktop menu.

Dragging: Icons can be put into different screen interfaces by dragging the icon between different screen interfaces.

☆ *To protect the screen ,please don't put any objects above the screen surface.*

4 transfer connection

Before using USB device please connect transfer line to computer



USB data line

U Disk

Connect U disk with transfer line → insert USB OTG port with OTG transfer line .When U disk is ready then can used .

☆ *Please don't push U disk frequently ,or will damage the U disk*

 
5 TF card Usage

☆Support 32GB memory card

Insert the memory into the card slot then the screen will display "SD card is in readying now", when the words disappear, it means the TF card have been prepared that can use.

Cancel TF Card



Close all programs or documents in the card .Click  → setting → TF card and internal memory → Uninstall TF card, press and popup a half of card then take it out.

☆ Please don't insert or push the card for more times or will damage the Card .


☆ Use brand card to avoid incompatible .

6 Start to use

Battery charging

One port of the power adapter insert into socket, another port connect to DC interface of device to charge ,when the battery is in charging will display as:



When the battery is fully charged, battery ICONS display as: .

☆can use a USB cable to connect the PC to charge.

☆Can Use the device when it is in charging ,but have to spend more time for charging

Battery management

The battery is not fully charged when packaged , advise you to make battery fully charging for 4 hours at least before you use the device.

Rechargeable battery life, generally depend on the times of charging and discharging . However, you can also play through the following Suggestions to extend the life of battery:

- To use the device at least once a week

- Regularly for battery fully charge.
- Don't let the battery in long time no power
- Always keep device and battery far away from heat objects

Set-up

Long press the power button for 5 seconds.

Wi-Fi network setting

Since many functions need with Wi-Fi connected, set Wi-Fi network first before using.



1. click → setting → Wireless and network setting.

Choose and open Wi-Fi menu to enter Wi-Fi settings

Then all usable Wi-Fi networks can be automatic searched and displayed. If showed

as among the Wi-Fi networks, then need to input password for connection.

2. Click the Wi-Fi network you need → If need password then input it → Click link.



3. Click button to back desktop

☆ If the Wi-Fi set is hidden, won't be searched out of itself. Need to click add Wi-Fi network, then input relevant information to add your Wi-Fi.

3G settings

1. Before connect 3G network, please choose the suitable 3G network card to support the tablet pc device, this model only support external USB dongle, the



dongle models can be found in search path setting → wireless and network → more → 3G support model information is shown in the equipment as below :

Wi-Fi
OFF
Airplane mode

3G Support List

This device can support below 3G Doogles:

Doogle List:

WCDMA:
HuaWei E230, HuaWei E176G, HuaWei E160E, HuaWei E182G, HuaWei E1782, HuaWei E1750, ZTE MF633BP-1, ZTE MF633, ZTE MF637U, HuaWei E1756, HuaWei UMG1691.

 
CDMA2000/EVDO:
HuaWei E150, HuaWei EC1261, HuaWei EC122, HuaWei EC156, HuaWei EC1270, ZTE AC580, ZTE AC2736, ZTE AC2746.

Usage :
Just insert the available 3G Doogle, and it will automatically dial-up.

PERSONAL


2. 3G card loaded with SIM card then connect the 3G USB dongle to the table pc.;





3. After connected 3G dongle, click  setting → wireless & network → more → mobile network, to set the 3G network.

4. Open mobile network: click data flow started → data wander to choose "Access Point Names", then click "Menu" button, then to set "New APN" Take Chinese WCDMA mobile operator as example to set the 3G network as below:

Name: 3GWAP / **APN:**3gnet / **Proxy:** Not set/ **Port:** 80 / **Username:** Not set/ **Password:** Not set/ **Server:** Not set/ **MMSC:** Not set / **MMS proxy** Not set/ **MMS port:** Not set / **MCC:**460/ **MNC:**01/ **Authentication type:** Not set/ **APN type:** Not set/

  After setting finished, then 3G network is connected then will display  ,if this logo show as darker state it means it is the searching of network ,if show as blue state means it has been connected with network , display means the date is under transmission.

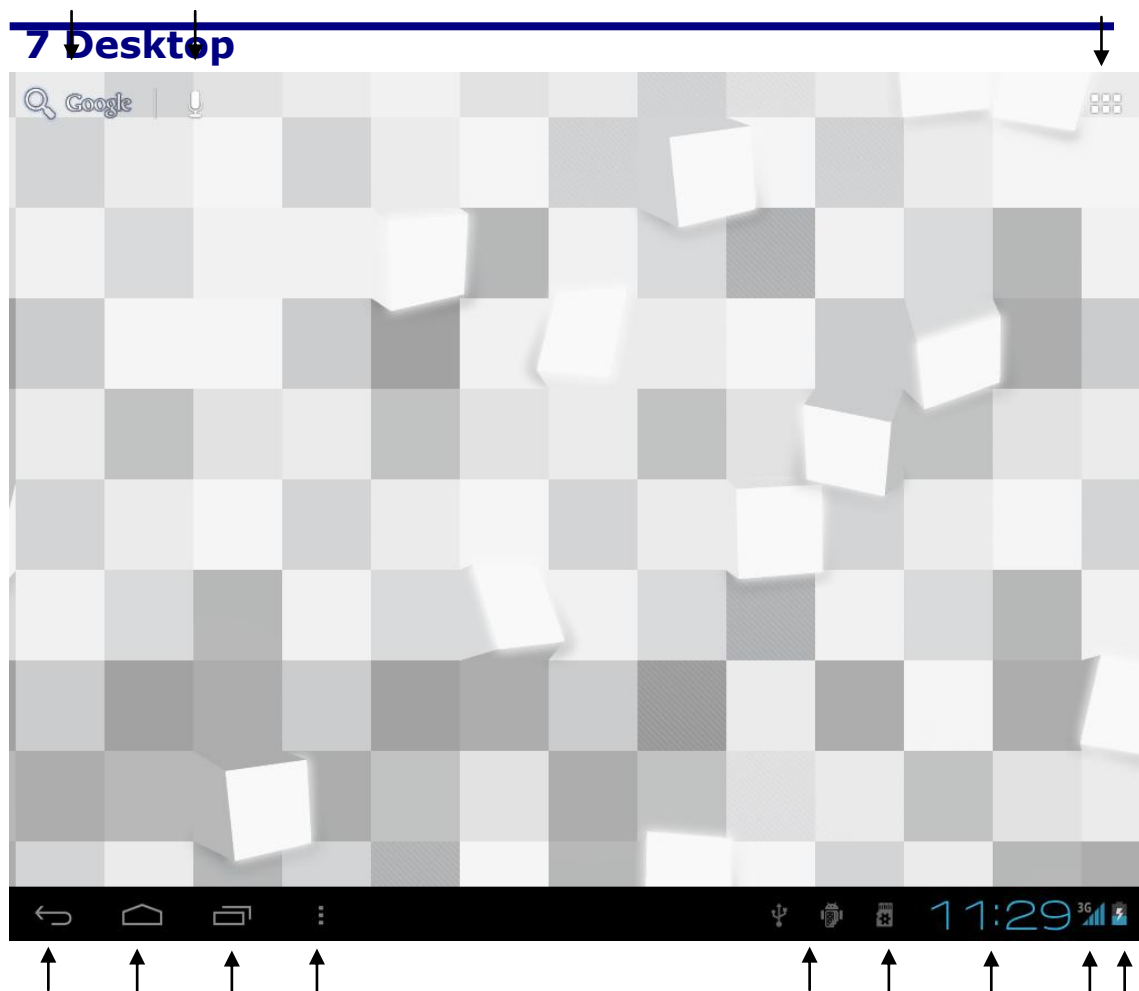

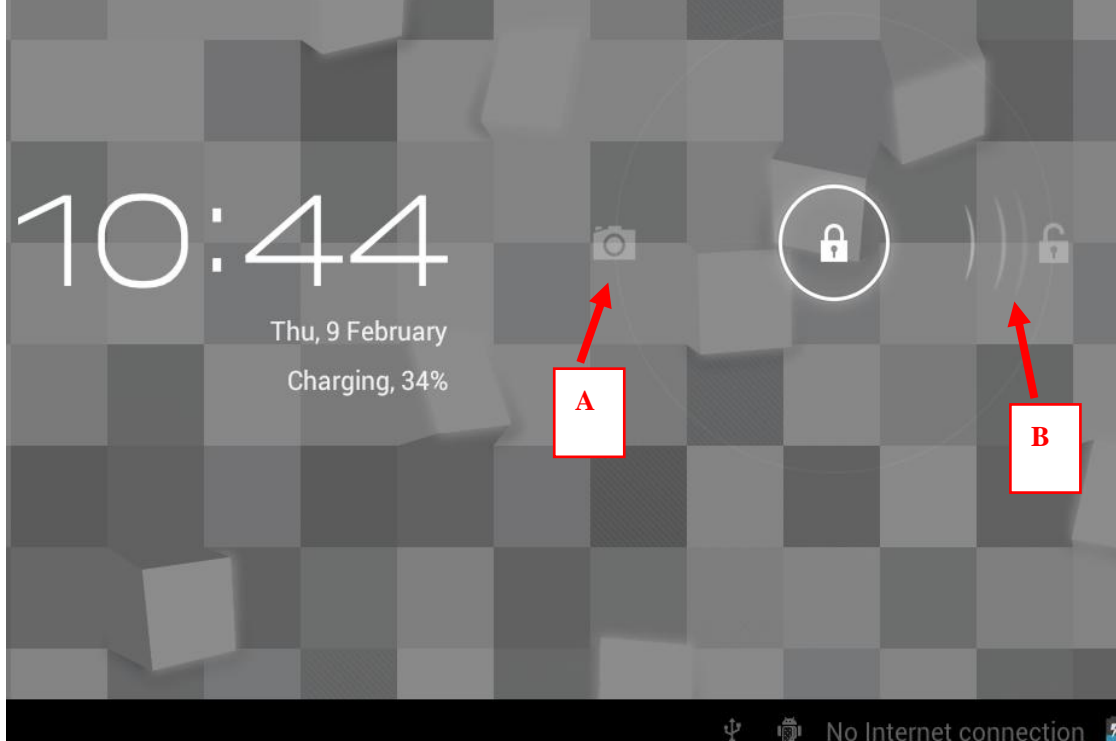

④ ⑤ ⑥ ⑦

⑧ A B C D

- ① Click it to view all applications
- ② Searching voice quickly function
- ③ : Quickly open browser interface
- ④ : Return to the current operation
- ⑤ : Back to desktop from app screen
- ⑥ : Select key for multi-page
- ⑦ : Menu function shortcut key
- ⑧ : USB connection

A: TF Card sate of connection

B :Current time

C: 3G/WIFI sate of connection

D: Battery status

☆Click on any program icon to run it.

☆Long press and drag icon, move it to other parts of the screen .。

☆press longer and drag icon to cleanup.



move it from the desktop

8 Screen Lock interface

Long time no using device or short press power button, the device will access to standby state. There are two states: first is deep sleeping standby, the device's screen is turned off, then need to press power button to enter standby screen, for example the above picture, press the red unlock



Switch it will display the point A\B as above picture, press A point for camera using ,press B for unlocking ,it show as B condition ,press unlock button to B will realize unlocking function ,press unlock button to A to use Camera function .

9 Program













Recorder






Record outside sounds



Clock

Show time and set time

 Downloads	Download	Quick install the apk downloaded
 Browser	browser	Connect to Internet browser
 Calendar	Calendar	Set calendar
 Camera	Camera	Take photos and video
 Calculator	Calculator	For simple calculating
 Email	Email	Receive and send email with existed email address
 File Manager	File viewer	Check and manage files, install Android apps and backup SD files
 Music	Music	Play and manage music files.
 Media Player	My video	Play and manage my video files
 Gallery	My gallery	View and manage my photo files

 Maps	Map	Check your local position when network connected
 Places	Places	Connect with internet to check your location and relative places near your location.
 Market	Google market	Login to download applications ,games etc.
 Search	Search	Search tool, search anything you need online.
 Settings	Setting	Set your system.


☆Long press to drag the icon.

 
☆Long press icon and drop in



to remove it from menu.

10 Menu

On the desktop, use the menu button  to display the menu function ,at the same time can realize commonly used procedures setting in the desktop .The way of setting is pressing the procedures logo to desktop.

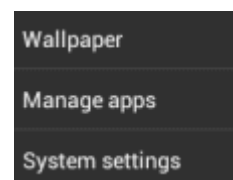

11 Application program

Install applications:

☆A lot of Free and interesting Applications are available on internet, you just need search by "Android applications" key words.



The Android Applications you downloaded are saved in File Manager, you can install it easily:

1. Copy the .apk application to SD or USB device → Put the SD card into Tablet or connect USB device with Tablet.



2. Click File Manager files browser logo .



3. Click SD or USB find the file with apk

4. Click the APK application → Install

After install successfully, the new application icon will show in Menu.

5. Click icon to run application or finish to return browser interface .

Download applications from Internet:

User could download any Android application from internet and install it easily and fast.





 
1. Click Google to search application in internet.
2. Input website address, click the download link to download the application.
3. After download finished, long press the application (saved in download history) → Click and open → install.

Connect to PC and save files.

1. Connect Tablet with PC by USB cable. One side is USB OTG port , another side connect PC USB port.



2. After connection, it will display image  , choose  run it ,then click Turn on USB device then user can exchange files between PC and Tablet device, as below:

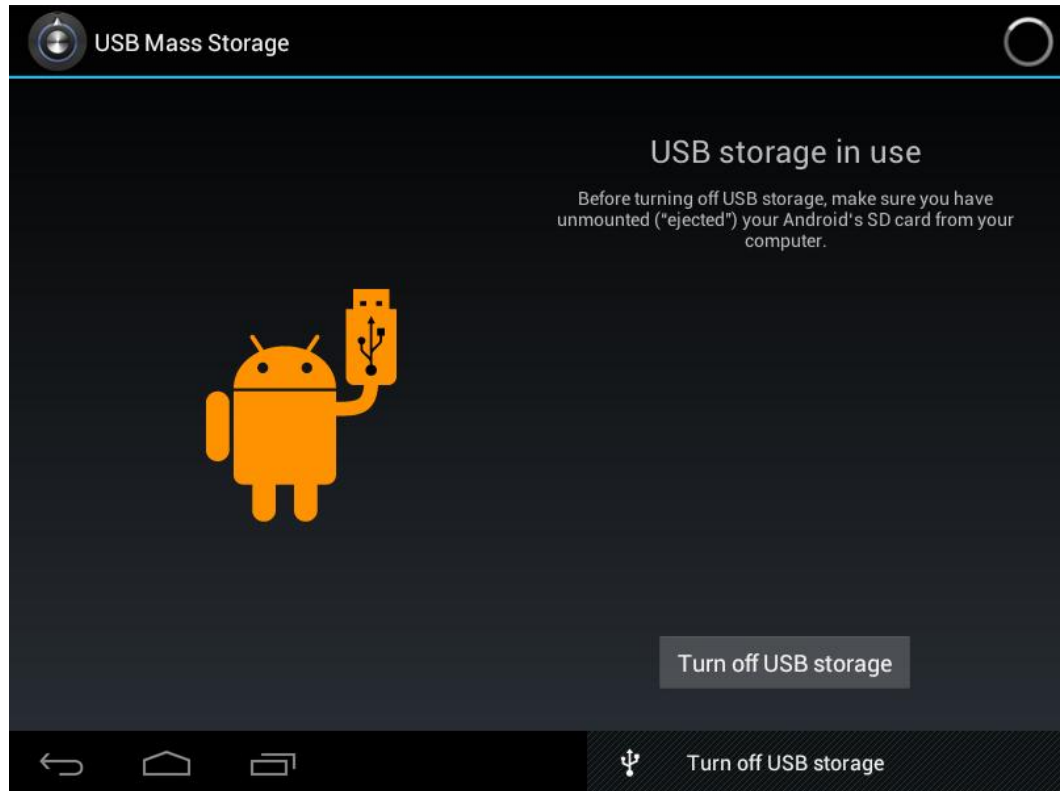

Uninstall application

User can easily to uninstall Android applications as below

 
1. Click Menu button→ setting → applications→ manage applications
2. Choose the application → uninstall
3. Click Yes to confirm uninstall.







12 Sound Record

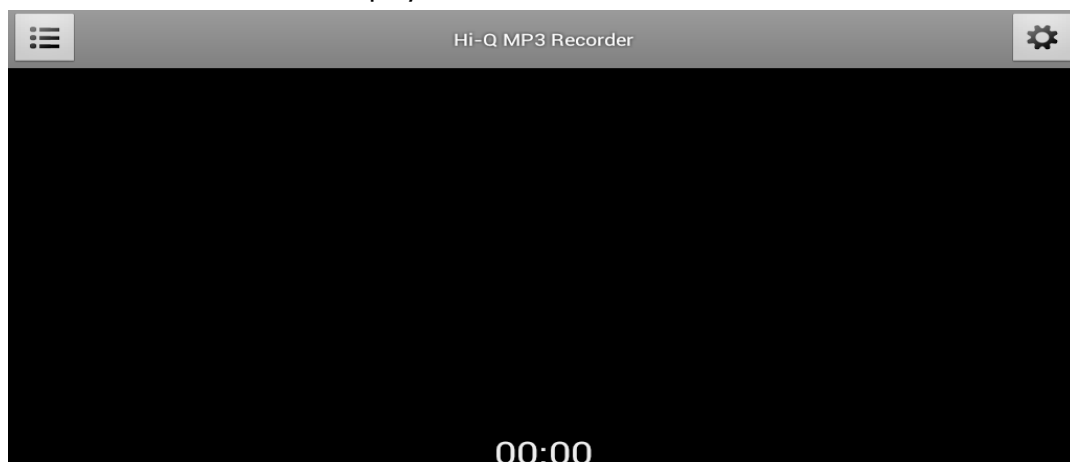

Click icon will display as below:




Click  start to record ,click  to stop record ,click  to view the record document and the documents will named according to the time you record .Click the record document to play record ,click  to set the record you made .




13 Clock



Click icon , User can check current Date and time.


Alarm clock

A few different alarm clock can exist in same Tablet.

☆ When the icon  show in top of Screen, it means at least one alarm clock is working.

Add new alarm clock.



1. Click icon .
 2. Click menu button → add clock.
 3. Set new alarm clock.
- ☆ If you didn't set repeat ,after alarm works on time, system will auto-delete the information.
- ☆ Click to start use the new alarm clock.
4. Finish

Disable alarm clock


When the alarm time on, a window with Clock will pops out.

If User need alarm again after 10mins,click Pause.

Click Cancel to stop alarm.

Enable Alarm clock.

Regarding the alarm clock which already set in repeat, Then usually User need suspense using it not delete it:

1. On interface of Clock, click icon  to suspend use this alarm clock.
2. Click  to resume.

Edit alarm clock.

1. Click  → click .
2. Entry the clock User need edit → reset.

Delete alarm clock.

1. Click icon  → click .
2. Open the alarm clock user need delete.
3. Choose delete it .

Click  return to desktop.



14 Download applications and install.

 


1. Click icon .
2. User can check and install the available applications from PC.




15 Browser

User can reach to internet by browser..

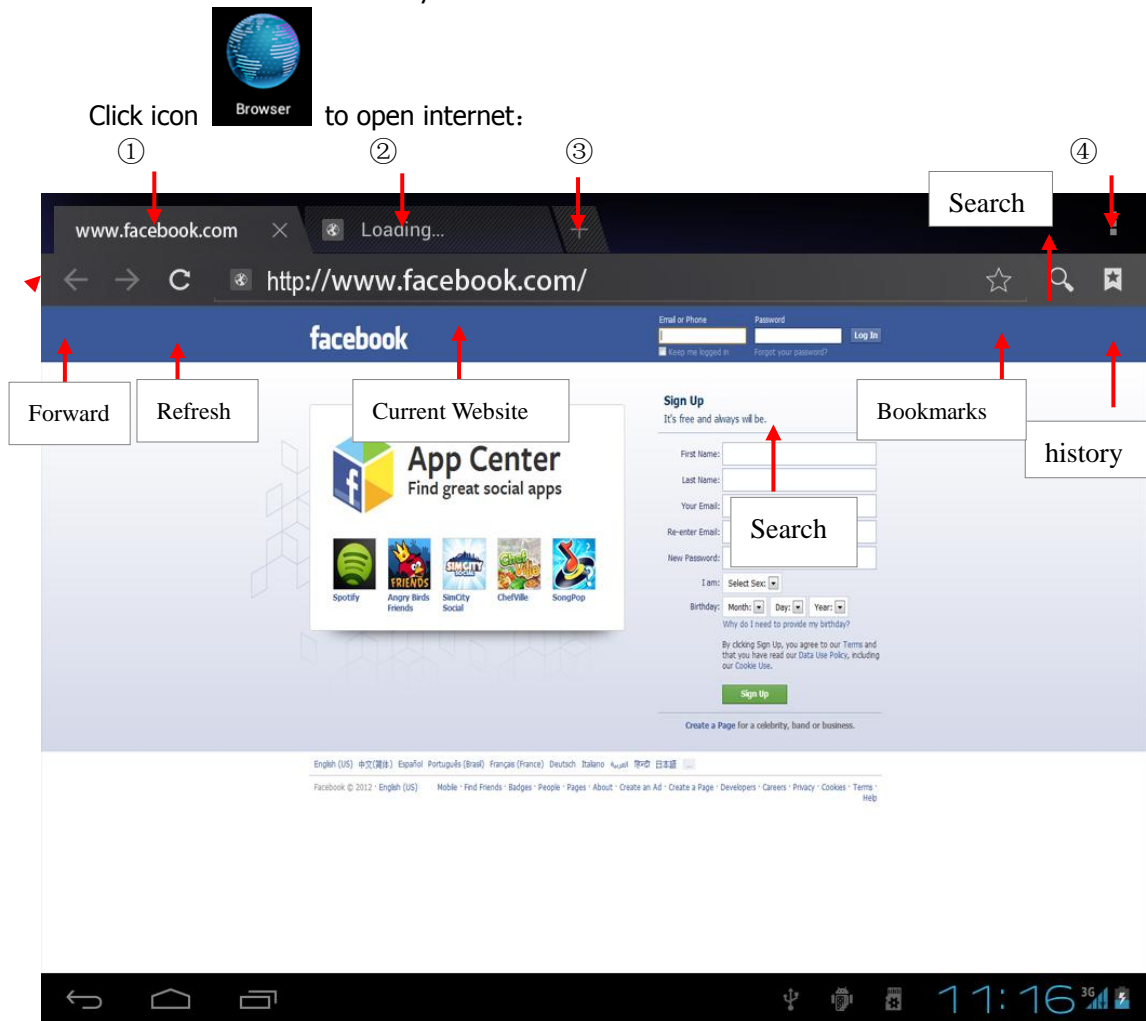

 ①: Visited web site; ②: Current web site; ③: Add web sites; ④: Menu

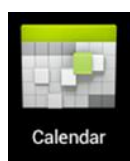

16 Calendar



Click the calendar program icon

First used calendar, need to add an exchange account. Input account email address and password. Click on next, according to the prompt complete account configuration, after that the calendar can be used

New activities

1. In the calendar interface, click new event dates you want to build.


2. Choose activity time - input relevant activity details in every field

 
3. Click finish

☆color display for gray date mean there are agenda on the day.



17 Camera



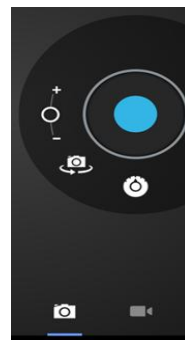

Click  to open camera then display icon




Take photos


1. Click  to take photos
2. Pictures will be kept
3. Click the thumbnail  to enter into my album to view pictures
4. Click back icon  to return back to camera.
5. Click  to realize camera setting .

Video Recording

1. click  switch to Video.
2. Click  to start recording, click  to pause recording.
3. Video will be kept.
4. Click the thumbnail  to play the video.
5. Click back icon to return back to camera.

6. Click  to quit camera and back to UI interface .

7. Click  to realize video recording setting .

Note: You can click  to switch front- camera and back- camera to take photos .



18 Calculator



1. Click the calculator program icon.
2. Click numbers and operational symbol to start calculate.
3. Click remove to remove all display



19 E-mail

☆ *Supports POP3 and SMTP accounts*

Add E-mail account

You can enter one or more E-mail address on device to use



1. Click E-mail program icon.
2. In your account interface, click next.
3. Click E-mail address options, → input your E-mail address.
4. In the password options, → enter your E-mail passwords.
5. Click finish

Manual Setup (Optional):Server setting can full in the E-mail provider (like gmail.com)according to your E-mail account .If you need to revise the server setting, you could click "manual setup" to make some change

6. Click "Next Step".
7. Optional: Input account name.
8. Display the account name when send and receive E-mail ,Click "Finish"

☆ *After Settings, if you cannot connect to a free email account, please contact with your email providers to confirm if their server support (POP) and (SMTP) transmission agreement.*

Inbox



1. Click E-mail program icon.
2. If only added one E-mail account, it will open promptly. If added several E-mail account, it will display the account list
3. Click the E-mail account you intended to check→ Click "Inbox"

Open E-mail

1. In the inbox, to click E-mail and open it.
2. As for attachment, Click "open" to start related application or click "Save" to save the attachment to SD card
3. For reply, click "reply or reply all"
4. Click "delete" to delete E-mail

Compose New E-mail

1. Click→ "Compose" icon.
2. Click " To", then add the addressee's E-mail account
3. If needed, Click "Menu' to add attachment
3. E-mail finished, then click "send"

Edit E-mail account



1. Click E-mail program icon
- 2 Choose "Account Setting" from "Menu"

3. After the completion of setting, then click



Delete E-mail Account

☆ *If you have several accounts, and you deleted the default account in settings. The next E-mail account on the E-mail list will become the default account automatically*



1. Click E-mail program icon

2. In inbox interface, click "Menu "to choose "account"
3. Click and hold the E-mail you intended to delete
4. Then popup "Account options", click "Delete account"
5. Click "Confirm" icon

Sets the default email account

You must always have an account designated as the default account, thus if you have multiple E-mail account, you can choose any one as the default.



1. Click E-mail program icon.
2. In your inbox interface click MENU →account Settings.
3. Click the default account to select.

☆ *If you delete the setting default account, the list of within next E-mail account will automatically become the default account.*

o



20 File Explorer



Click the icon "File Explorer" to check files in all storage device (Tablet PC internal storage, SD card, USB storage device), and you could conveniently and fast install the Android application to the tablet PC.

The "File Explorer "has following functions:



Setting Internal Storage



Your SD Card



USB Flash Disk (USB cable required)



 
Return to A last Folder



Create New Folder



Files setting






Pictures

Copy files from computer to tablet PC

You could copy files to File Explorer from external storage device, computer. If you need to copy files to tablet PC, you are required to copy files to SD card and USB storage device in advance.

 
Tablet PC internal storage folder named "Local Disk", SD card named "SD card", USB storage device named "u disk"

Here is the instruction to copy files from SD Card and USB Storage device to tablet PC. You could use the same method to copy your files to SD card or USB Storage device, then connect your storage device to computer, then start copy file to the folder you need.

- 1.click  or  to find the files in your storage device.
- 2.Click and hold the files or folder you intended to copy → then click "copy"
- 3.Click  to return to tablet PC internal storage → click the target folder → then click "Paste"

Delete files

Press the file you need to delete →click delete button →click ok to delete .

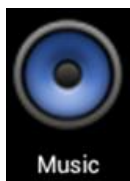

21. Music

support audio format: MP2, MP3, WAV, WMA, and AAC

Play music



1. Click my music program icon.
2. From all/album/artist/directory/my favorite/custom playlists of select you want to play music.

 


3. Click previous song→ suspended →next song icon to play.



4. To music while playing on an interface, can press Return or press the HOME returns to the desktop.

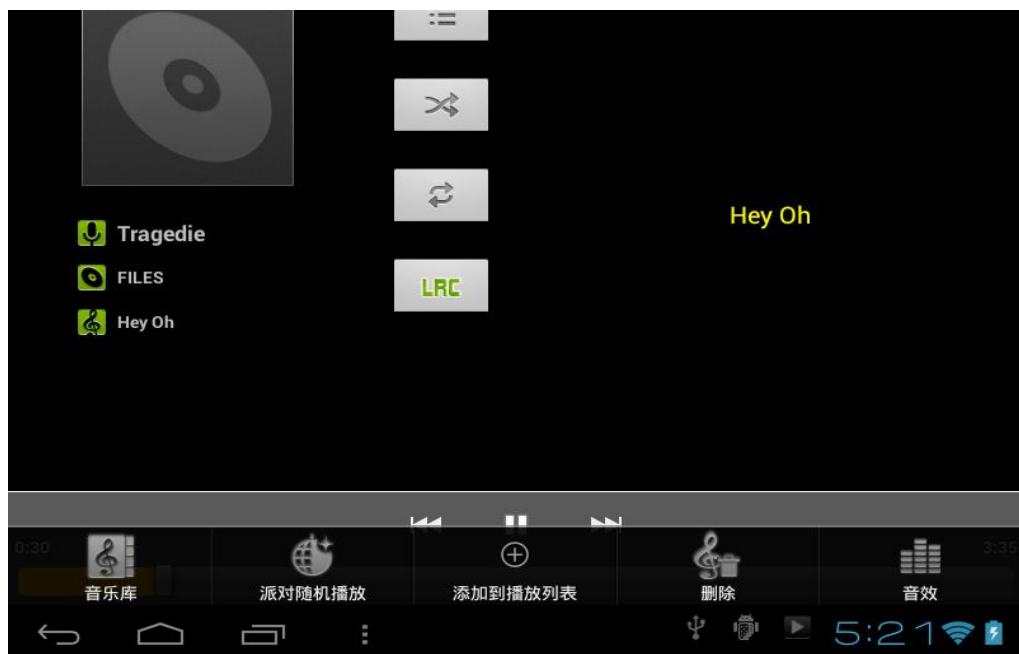

Click on the right lower corner images into the music player, Interface shown below:

 


22 Video

- ☆ AVI、WMV、RM、RMVB、3GP、MKV、MP4、ASF、VOB、MPG、MOV up to 1080P HD-Definition







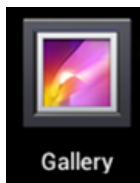

 1. Click  icon → click on a video group
2. Click the video you want to view
3. Click the screen to video related regulation(include volume ,stop/play and brightness etc)
4. Press return key  to back the vedio player interface.



23 Photo Gallery

 JPEG、BMP、GIF、PNG

 


1. Click the  photo gallery program icon, enter the Gallery.
2. choose photos groups to browse.
3. Press return key to back the photo gallery interface.
4. click  to slideshow .slideshow mode: normal play ,classical, Passion. Romantic and fun
5. click  to sort color for pictures
6. click  to sort time for pictures
7. click  to sort name for pictures

Delete pictures and Dynamic switching wallpaper Settings

1.  multiple choose
2.  delete

3.  Dynamic switching wallpaper Settings

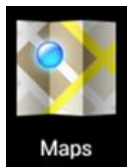


24 MAPS

When Use this function ,it must be determined computer connection with INTEL network state,.



 After connected network ,please click icon ,can open current position map automatically ; see below picture ,you can find what you want by setting

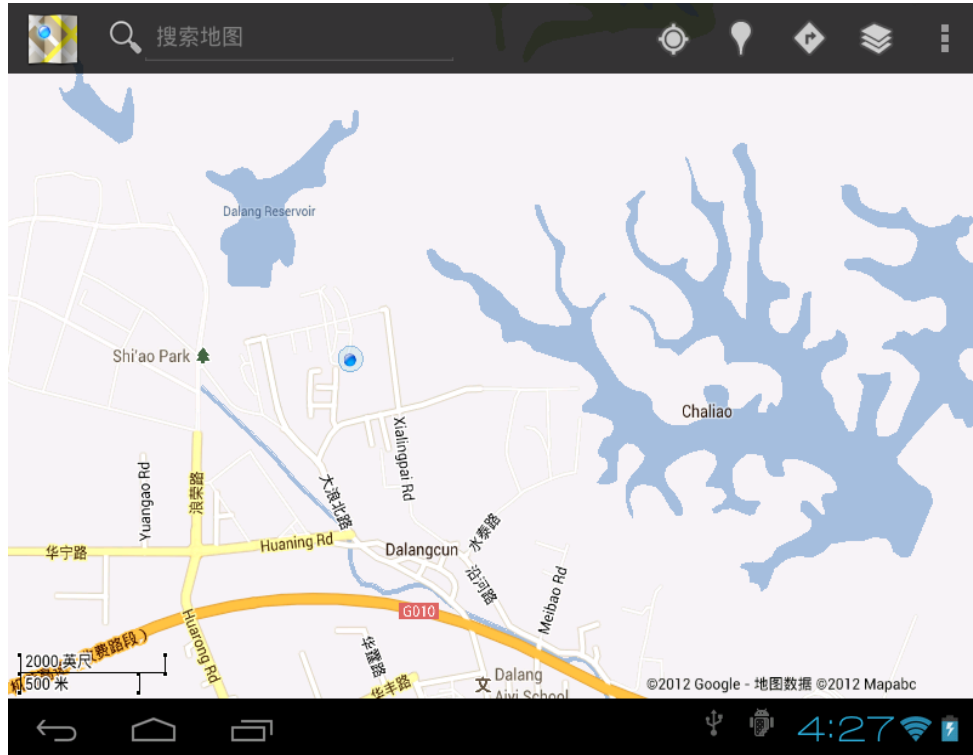

25 Local search

 
Same similar map functions ,can select to store huge amounts of information





26 Android market


To open android market ,can inquiry apps programs download

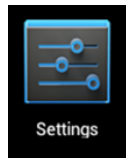First run android market , The system will require GMAIL E-mail accounts for landing(if have not Gmail email account ,please apply it from <http://gmail.google.com>)



27 Setting

Wireless and network	Wi-Fi	Open Wi-Fi
	Wi-Fi settings	Setup and manage wireless access points
	Flight patterns	Disuse all wireless connection
	3G network settings	Set 3G network
Ethernet network		Configure Ethernet network.
Select setting		Select ADSL for network, input user name and passwords to connect
USB	Bulk memory	configure USB for bulk memory
	ADB	Configure USB for ADB
Voice	Silent patterns	Except the media and the alarm clock sounds, all are set to mute
	volume	Adjust media volume, alarm clock volume, and inform the volume. Click and remove  slider, and then click ok
	Inform ringtones	Select the desired inform rings.
	Select operated sound	When selecting screens broadcasting sound
	Prompt screen lock	When locking and unlocking screen to playing sounds
Display	brightness	Click and remove slider  to adjust screen brightness, and then click ok
	Automatic rotating screen	When make checked, the screen will be automatically switch between screen and vertical screen according to equipment direction of rotation
	System dormant	Adjustment screen close ,system will delayed time for automatically dormant
	Screen overtime	Adjustment a delayed time for automatically locked screen

Security	Screen lock setting	Use icon .PIN or passwords to lock screen
	passwords visual	Can passwords visual when input
	select device manager	Add or delete device manager
	use security certificate	Allow applications programs to visit security certificate and other certificate
	install from TF card	Install cryptographic certificate from TF card
	passwords setting	Set or revise certificate storage passwords
	delete storage	Delete all information of certificate storage and reset passwords
Applications	Unknown sources	Allow to install the applications from the non-Android market
	Management application	Manage and delete installation applications
	Running services	Check and control the currently running services.
	development	Setup application development options
Privacy	Recoveryfactory Settings	<p>Click will remove all the data on device. Click reset device will be reset, or click  to cancel and return to a screen</p> <p>Warning! The following will delete all the data from equipment:</p> <ul style="list-style-type: none"> ~ Google account ~ system and the application's data and Settings ~To download applications <p>The following won't because the reset to be delete:</p> <ul style="list-style-type: none"> ~ the current system software and bind application ~ SD documents, such as music or photos
TF card and device memory	Total capacity, capacity available	It will display when you insert TF
	Uninstall TF card	When insert TF card ,you can click uninstall TF card to uninstall
	Format TF card	Format(delete) TF card
Language and keyboard	choose Language	According to your location select the corresponding language
	Android Keyboard	Screen keyboard Settings
	User dictionaries	User can add words to user dictionaries
Date and time	set date	Set date
	Select time zone	Select time zone
	Set time	Set time

	Using 24 hour format	Can choose to use 24 hours format or 12 hour format
	Choose the date format	User can choose the date format
About tablet PC		Check status messages, and power usage, legal information, model, Android version, kernel version and the version number
Touch screen calibration		Touch screen calibration

Appendix. Suggested optional accessories and model

Accessories description	Accessories model NO	
3G USB dongle list	TD-SCDMA	
	WCDMA	huawei E230, E176G, E160E, E182G, E1782, E1750
		ZTE MF633BP-1, MF633, MF637U.
	EVDO	Huawei E150, EC1231, EC122, EC156 EC1270,
		ZTE AC580,ZTE AC2736, AC2746.